



# VFC400

## Software Setup and Configuration





# Open Control Solutions VTMC

by clicking on the icon on your desktop

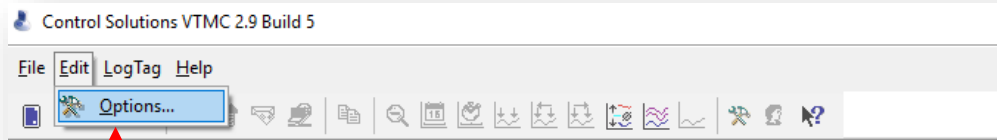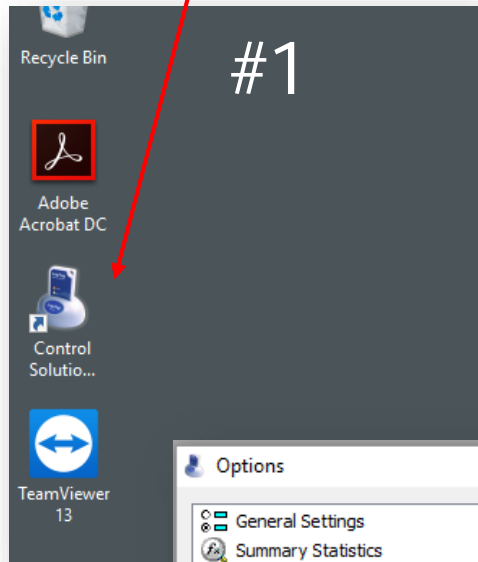

#2 Next, open the Edit menu and choose Options

#3 From the Options menu choose General Settings and select your preferred temperature scale: F° or C°\*

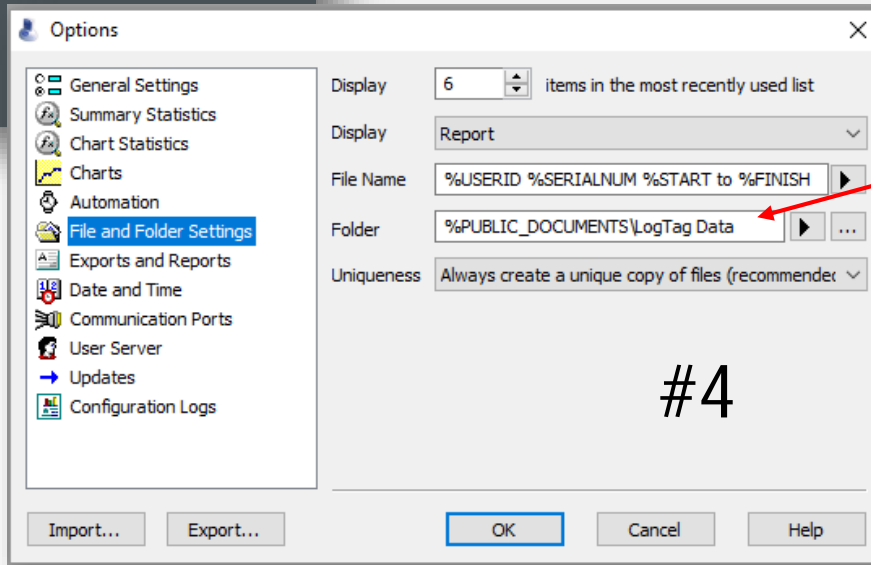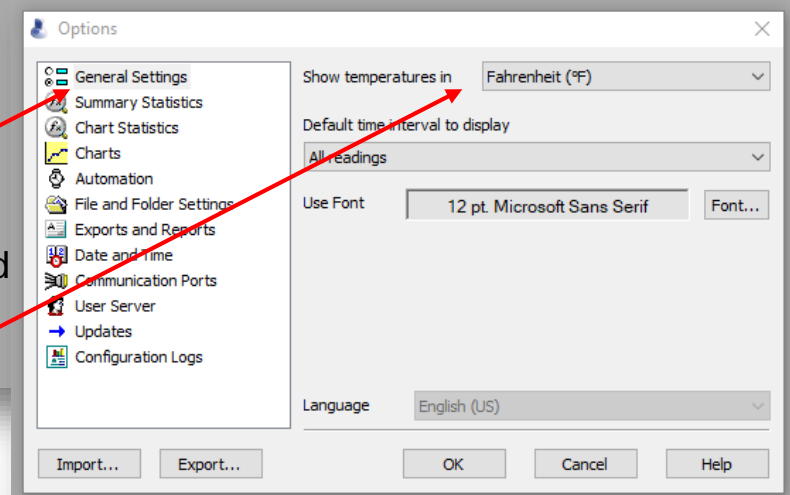

Data will automatically be saved to the newly created folder Public>Documents>LogTag Data every time your logger is placed in the docking station. Anyone logged into the PC can access the data.

If you prefer to save the data to a network or shared drive, click the button with 3 dots(...). A box will appear saying "Locate Folder". Simply go to the folder you want to save the data to and click "OK".




# Choose OK

to complete software configurations

the remaining options do not require changes

Other options are configurable but not necessary

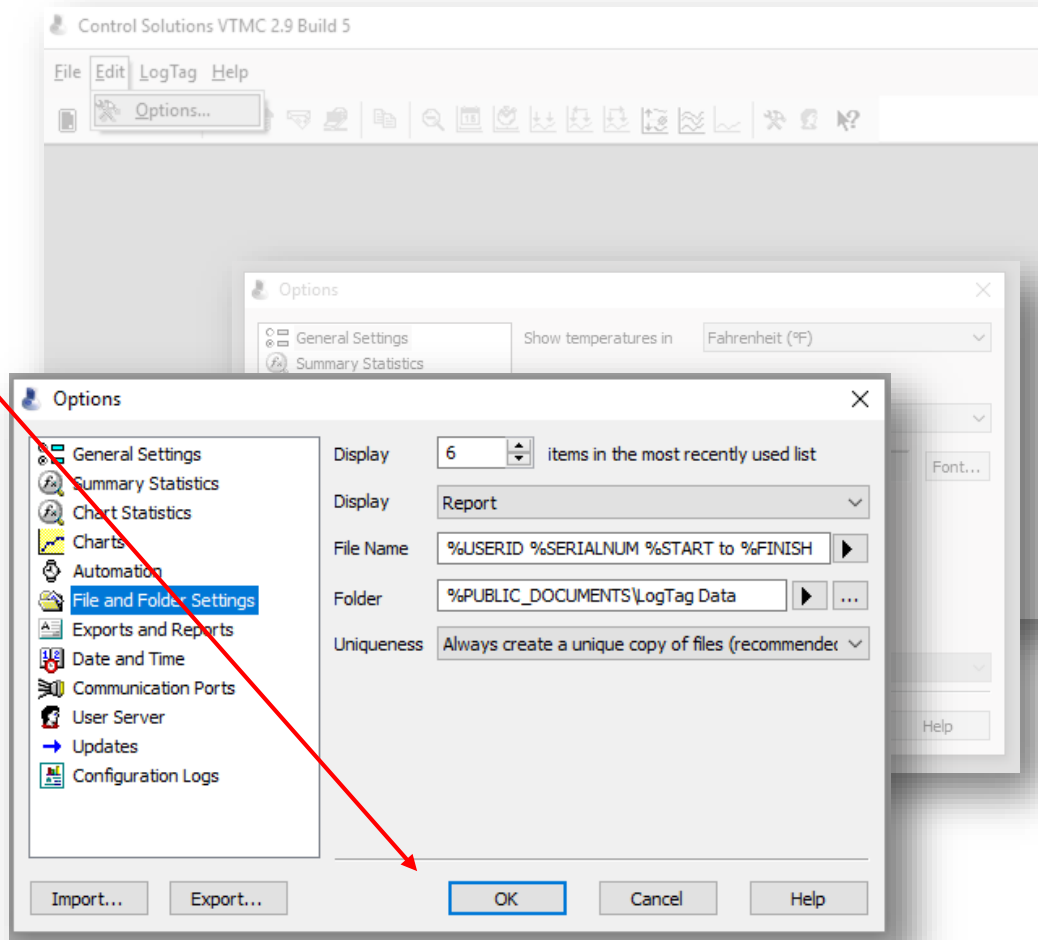

# Questions about software download?

Visit our [support page](#)

Send us an email  
[support@vfcdataloggers.com](mailto:support@vfcdataloggers.com)

Jump to:

[VFC400 Installation](#)

[VFC400 Software Download](#)

[VFC400 Software Set Up](#)

[VFC400 Logger Configuration](#)

[Data Logger Operation](#)

